

DeFelsko®

PosiTector SHD Probe Mount Installation


(May be purchased separately)

- 1 To install on the PosiTector SHD Test Stand:
 - 1.1 Thread the thread adapter into the test stand load rod. You may need to use a 9mm wrench and hold onto the load rod knob. Do not overtighten and strip the threads.

Note: The thread adapter changes the mounting screw thread (M6 x 1) to the load rod thread (M7 x 0.5).



- 1.2 Use the included 5 mm hex L- key to remove the two screws and plate from the front of the probe mount.

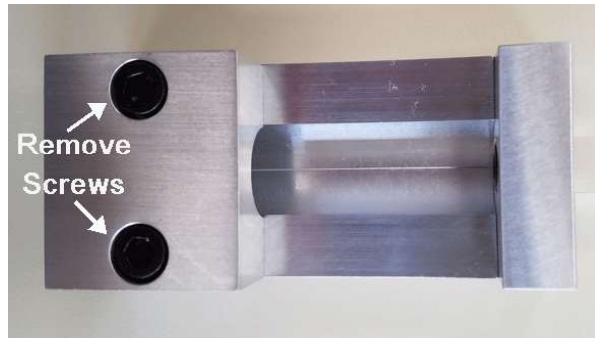

- 1.3 Use the included mounting screw and 5 mm hex L- key to attach the probe mount to the thread adapter. While tightening the screw keep the probe mount aligned as shown below.




DeFelsko®

- 1.4 Place a probe into the probe mount and install the plate and previously removed screws. Make sure the screws are snug but not overly tight.



- 2 To install in stands using 1/2" (12.5mm) diameter clamp:
 - 2.1 Remove the two screws and plate from the front of the probe mount.

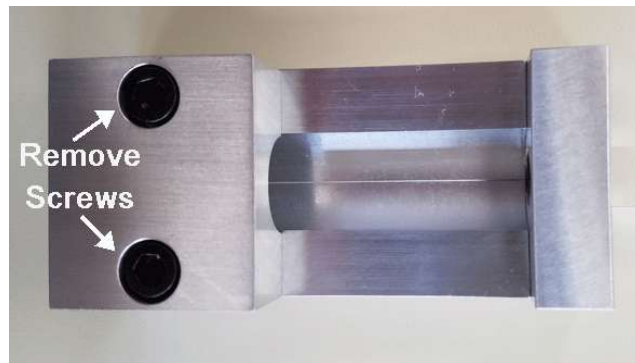


- 2.2 Use the included mounting screw and 5 mm hex L- key to attach the stand adapter to the probe mount.



DeFelsko®

- 2.3 Place a probe into the probe mount and install the front plate and previously removed screws. Make sure the screws are snug but not overly tight.

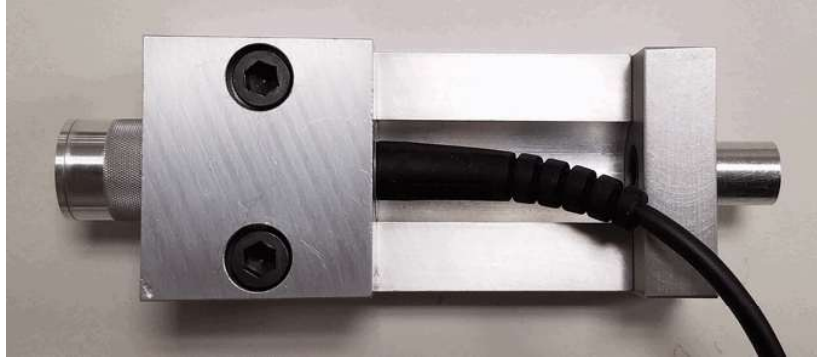

- 3 The probe mount can now be attached to a clamp based stand like to one shown below.

